

REMOTE CONTROL HANDLE FOR THE CT-901HP HYDRAULIC PUMP INSTALLATION INSTRUCTIONS

© Panduit Corp. 2007

Step 1:

Step 2:

Step 3:

- 1. Unplug the Hydraulic Pump power cord from the electrical receptacle.
- Remove the upper (orange) cover from the CT-901HP Hydraulic Pump by removing the four (4) socket head cap screws and washers. Set the upper cover and fasteners aside.
- 3. Disconnect any current controller from the hydraulic pump by disconnecting the controller cable wires from the hydraulic pump. The controller cable is easily disconnected by unplugging the bullet-type disconnects. Make a note of the cable wires connections (color-coding) in the event that the controller would be re-installed.
- 4. Connect the CT-901RCH Remote Control Handle to the Hydraulic Pump by connecting the remote control handle cable, following the wiring diagram below. Replace cover.
 - CT-901HP HYDRAULIC PUMP WIRES Connect the **Black** on Remote Control Handle to (Female Disconnects) the **Black** on Pump. Connect the Green on Remote Control Handle to **Red** on Pump. Connect the White on Remote Control Handle to White on Pump. Black Red White П White Green Black · CT-901RCH REMOTE **CONTROL HANDLE WIRES** (Male Disconnects)

Website: www.panduit.com Email: cs@panduit.com



For Technical Support: 888-506-5400, ext. 3255 Fax: (630) 759-7532